

**(1) SIZE 4, (2) SIZE 3, (1) SIZE 2, (11) SIZE 1, FURNAS MOTOR CONTROL CENTER (MCC)**

**VERTICAL SECTION #1 - 4 HIGH**

COMPARTMENT #1:

SIZE 1 FVNR STARTER, 14DF32AA818 CONTACTOR,  
30 AMP, 7-1/2/10HP, (3) 2.5 AMP FUSES

COMPARTMENT #2

SIZE 1 FVNR STARTER, 14DF32AA818 CONTACTOR,  
30 AMP, 7-1/2/10HP, (3) 10 AMP FUSES

COMPARTMENT #3

SIZE 3 FVNR STARTER, 14HB32AA81A CONTACTOR,  
25-50HP, (3) 60 AMP FUSES

COMPARTMENT #4

SIZE 3 FVNR STARTER, 14HB32AA81A CONTACTOR,  
25-50HP, (3) 30 AMP FUSES

**VERTICAL SECTION #2 - 4 HIGH**

COMPARTMENT #1

SIZE 1 FVNR STARTER, 14DF32AA818 CONTACTOR,  
30 AMP, 7-1/2/10HP (3) 5.6 AMP FUSES

COMPARTMENT #2

SIZE 1 FVNR STARTER, 14DF32AA818 CONTACTOR,  
30 AMP, 7-1/2/10HP (3) 25 AMP FUSES

COMPARTMENT #3

SIZE 1 FVNR STARTER, 14DF32AA818 CONTACTOR,  
30 AMP, 7-1/2/10HP (3) 5 AMP FUSES

COMPARTMENT #4

SIZE 1 FVNR STARTER, 14DF32AA818 CONTACTOR,  
30 AMP, 7-1/2/10HP (3) 5 AMP FUSES

**VERTICAL SECTION #3 - 5 HIGH**

COMPARTMENT #1

SIZE 1 FVNR STARTER, 14DF32AA81A CONTACTOR,  
(3) 8 AMP FUSES, 7-1/2 – 10 HP

**CASEY**

275 Kappa Drive, Pittsburgh, PA 15209 • Phone: (412) 963-1111 Fax: (412) 963-0808 •

[www.caseyusa.com](http://www.caseyusa.com)

COMPARTMENT #2

SIZE 1 FVNR STARTER, 14DF32AA81A CONTACTOR,  
(3) 20 AMP FUSES, 7-1/2 – 10 HP

COMPARTMENT #3

SIZE 1 FVNR STARTER, 14DF32AA81A CONTACTOR,  
FUSES MISSING, 7-1/2 – 10 HP

COMPARTMENT #4

SIZE 1 FVR STARTER, FORWARD CONTACTOR F22DF32AAE-3,  
REVERSING CONTACTOR – NO N/P, (3) 10 AMP FUSES

COMPARTMENT #5

SIZE 2 FVNR STARTER, 14FF32AA81A CONTACTOR,  
25HP 45A, (3) 30AMP FUSES

**VERTICAL SECTION #4 - 3 HIGH**

COMPARTMENT #1

SIZE 1 FVNR STARTER, 14DP32AF71 CONTACTOR  
(3) 15 AMP FUSES

COMPARTMENT #2

STRIPPED

COMPARTMENT #3

SIZE 4 FVNR STARTER, 14JB32AA81A CONTACTOR,  
40/100HP, (3) 150 AMP FUSES

**INVENTORY ID: 113111-009-02**

**CASEY**

[www.caseyusa.com](http://www.caseyusa.com)

275 Kappa Drive, Pittsburgh, PA 15209 • Phone: (412) 963-1111 Fax: (412) 963-0808 •