

(1) SIZE 5, (2) SIZE 4, (4) SIZE 2 (4) SIZE 1, FURNAS, MOTOR CONTROL CENTER (MCC)

VERTICAL SECTION #1

COMPARTMENT #1

MISCELLANEOUS RELAYS

VERTICAL SECTION #2 - 2 HIGH

COMPARTMENT #1

DAMAGED MCB

COMPARTMENT #2

600 AMP MCB WITH (3) 600 AMP FUSES

VERTICAL SECTION #3 – 5 HIGH

COMPARTMENT #1

SIZE 1 FVNR STARTER – 14DF32AA81A FURNAS CONTACTOR, 30 AMP FUSES

COMPARTMENT #2

0 AMP DISCONNECT

COMPARTMENT #3

SIZE 2 FVNR STARTER – FURNAS 14FF32AA81A CONTACTOR, 35 AMP FUSES

COMPARTMENT #4

BROKEN 20 AMP DISCONNECT

COMPARTMENT #5

30 AMP FUSED DISCONNECT

VERTICAL SECTION #4 – 5 HIGH

COMPARTMENT #1

BROKEN 30 AMP DISCONNECT

COMPARTMENT #2

15 AMP DISCONNECT

COMPARTMENT #3

SIZE 2 FVNR STARTER – FURNAS 14FF32AA81A CONTACTOR, 35 AMP FUSES

COMPARTMENT #4

SIZE 1 FVNR STARTER – FURNAS 14DF32AA81A CONTACTOR, 10 AMP FUSES

COMPARTMENT #5

EMPTY

VERTICAL SECTION #5 – 2 HIGH

COMPARTMENT #1

SIZE 1 FVNR STARTER – FURNAS 40DF32AAA CONTACTOR

COMPARTMENT #2

SIZE 5 FVNR STARTER – WESTINGHOUSE 179C809G34 DISCONNECT

VERTICAL SECTION #6 – 2 HIGH

COMPARTMENT #1

200 AMP FUSED DISCONNECT

COMPARTMENT #2

SIZE 4 FVNR STARTER

200 AMP FUSED DISCONNECT AND

(3) FURNAS 14JB32AA81 SIZE 4 CONTACTORS

VERTICAL SECTION #7 – 2 HIGH

COMPARTMENT #1

25 AMP FUSED DISCONNECT

COMPARTMENT #2

SIZE 4 FVNR STARTER – (3) FURNAS HJB32AA81 SIZE 4 CONTACTORS

VERTICAL SECTION #8 – 5 HIGH

COMPARTMENT #1

EMPTY

COMPARTMENT #2

60 AMP FUSED DISCONNECT SWITCH

COMPARTMENT #3

SIZE 2 FVNR STARTER WITH ESP-100 SOLID STATE OVERLOAD RELAY

COMPARTMENT #4

SIZE 2 FVNR STARTER WITH ESP-100 SOLID STATE OVERLOAD RELAY

30 AMP USES

COMPARTMENT #5

SIZE 1 FVNR STARTER – FURNAS 14DF32AA81A CONTACTOR

90”H X 160”W X 21”D

230-115V CONTROL TRANSFORMER

INVENTORY ID: 113118-007-01